




CAM200PIGFF Radioactive Gas Monitor

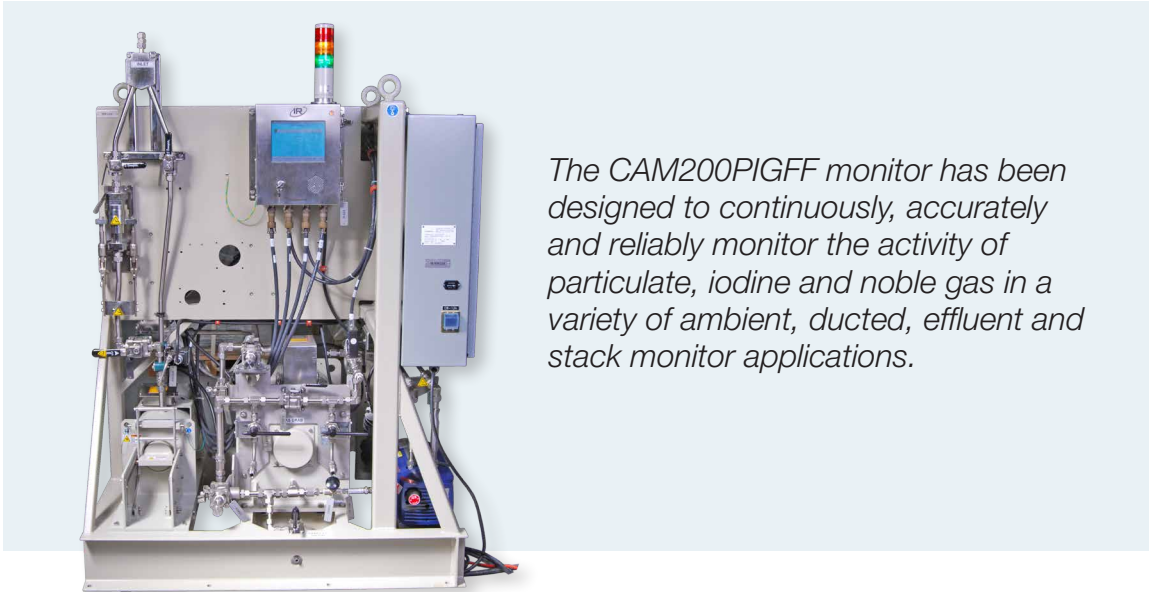

The CAM200PIGFF monitor has been designed to continuously, accurately and reliably monitor the activity of particulate, iodine and noble gas in a variety of ambient, ducted, effluent and stack monitor applications.

FEATURES

- Particulate and Iodine are monitored simultaneously using the same sampler thanks to a unique LED gain-stabilized scintillation detector
- Wide range noble gas measurement
- Low profile, space-saving footprint for easy access and maintenance
- Flow splitter designed to reduce particulate loss and improve collection efficiency at the filter
- Easy, single-hand filter change mechanisms
- Flexible ratemeter supports analog and digital interface with existing control systems; intuitive touchscreen interface provides access to 32 user-configurable virtual channels
- Real-time data acquisition and control
- Low maintenance, simple calibration
- Check sources for routine performance monitoring
- Grab gas access point simplifies sample collection for laboratory analysis
- Gas purge capability
- Optional stack representative sampling package
- Optional HORIZON™ or RADACS™ integration

QUALITY

The CAM200 Series Samplers are designed and manufactured under a quality system in compliance with the following standards and requirements:

- ISO 9001
- 10CFR21
- 10CFR50, Appendix "B"
- IEEE-730
- ANSI/ASME NQA-1, ANSI/ASME NQA-2, Part 2.7
- CE
- TUV SUD America is a listed NRTL

CAM200PIGFF Radioactive Gas Monitor

MAJOR ASSEMBLIES

- MAP35C fixed filter Particulate/Iodine sampler
- MDN455V6 Beta Gamma Scintillation Detector with PA300E Preamplifier
- Cs-137 check source (integrated)
- MG4A gas sample chamber
- MDN45E Beta Gas Detector with PA300E Preamplifier
- ⁹⁰Sr check source (integrated)
- iR7040 Intelligent Ratemeter
- FA200 in-line particulate/iodine sample collectors
- Sample pump
- Sample air flow controller
- Pressure transducer
- Power: 230 V ac 50/60 Hz
- Integrated on a welded steel, seismically qualified open skid/frame
- Stainless steel sample tubing and components
- Semi-Auto Clean/Purge (Optional)
- Integrated Bypass (Optional)

CHANNEL CHARACTERISTICS

- Noble Gas Channel (MG-4A)
 - Radiation detected: Beta
 - Detector: MND45E Plastic Scintillator; 0.25 mm (0.010 in.) thick, 50.8 mm (2 in.) diameter
 - Typical energy range: 0.15 – 1 MeV (Max Energy)
 - Typical measurement range: 1.0×10^4 to 1.0×10^{14} Bq/m³ (2.7×10^{-7} ~ $2.7 \times 10^{+3}$ μ Ci/cc)
- Particulate and Iodine Channel (MAP35C)
 - Radiation detected: Beta and Gamma
 - Detector: MDN455V6, Dual Scintillator, 2 in. (50.8 mm) diameter x 0.010 in. (0.25 mm) thick plastic scintillation beta detector and, 1.86 in. (47.2 mm) diameter x 0.310 in. (7.9 mm) thick BGO scintillation gamma detector
 - Typical energy range: 0.10–2.55 MeV (Particulate); 0.32–0.40 MeV I-131 peak (364 keV \pm 25%)
 - Typical measurement range: 2.0×10^{-1} to $1.0 \times 10^{+5}$ Bq/m³ (6.0×10^{-12} ~ 5.0×10^{-6} μ Ci/cc) – Beta Particulate; 2.0×10^0 to $1.0 \times 10^{+5}$ Bq/m³ (5.0×10^{-11} ~ 5.0×10^{-6} μ Ci/cc) – Gamma Iodine

ENVIRONMENTAL

- Ambient Temperature: 0 °C to +50 °C (+32 °F to +122 °F)
- Ambient Humidity: 0 to 95% relative humidity
- MTBF: >20,000 hours
- TID: 100 Gy (10^4 rad)

SAMPLE TRANSPORT

- Sample Temperature: 0 °C to 50 °C (+32 °F to +122 °F)
- Internal Pressure: 0 to 1.0 atm (0 to 14.7 PSIG) normal. 1.4 atm (20.5 PSIG) maximum
- Internal Vacuum: 0 to 0.5 atm (0 to 15 in. Hg) normal
- Flow Rate: Up to 56.63 LPM (to 2 SCFM)
- Pump: Carbon vane, positive displacement vacuum pump

MECHANICAL

- Mounting: Floor mounted skid
- Skid Size: 1235 x 864 x 1880 mm (48 x 34 x 74 in.) (L x W x H)
- Skid Weight: Up to 1200 kg (2650 lb), approximately

POWER REQUIREMENTS

- 120 V ac or 230 V ac 50/60 Hz (other voltages available)
- 15 A (120 V) or 8 A (230 V)
- 1800 W

COMMUNICATIONS

- One Ethernet
- Three RS-485 serial, two isolated
- Two RS-232 serial
- Eight safety rated relays. One for faults, seven configurable for alarms, etc.

DISPLAYS AND ALARMS

- Large, 21 cm (8.25 in.), diagonal industrial, hardened, color touch-screen display
- Bright, tricolor LED; red, amber and green
- Front panel embedded audible alarm annunciator with adjustable volume and local silencing
- Tricolor light tower for optimum visibility and indication of status; red, amber and green

OPTIONS

- HORIZON Supervisory Software package enables complete system integration. For detailed information, see the HORIZON specification sheet
- Stack representative sampling packages designed in accordance with the ANSI-N13.1, 1999, 2011
- Dual Pumps
- Heat trace on Sample lines
- RG1 Reference calibration assembly special tools
- Reference calibration sources
- Semi-Auto Clean Air Purge
- Integrated Bypass



HORIZON, RADACS and SafePoint trademarks and/or registered trademarks of Mirion Technologies, Inc. and/or its affiliates in the United States and/or other countries.

All other trademarks are the property of their respective owners.

©2017 Mirion Technologies (Canberra), Inc. All rights reserved.

Copyright ©2017 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.

CANBERRA